

SI-15 15 GALLON PORTABLE SPRAYER



OWNER'S MANUAL

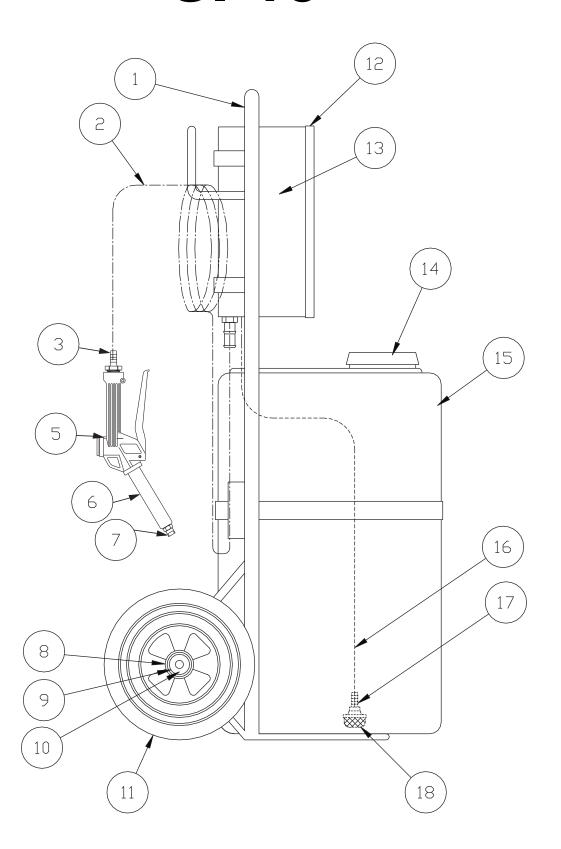

SIDE VIEW

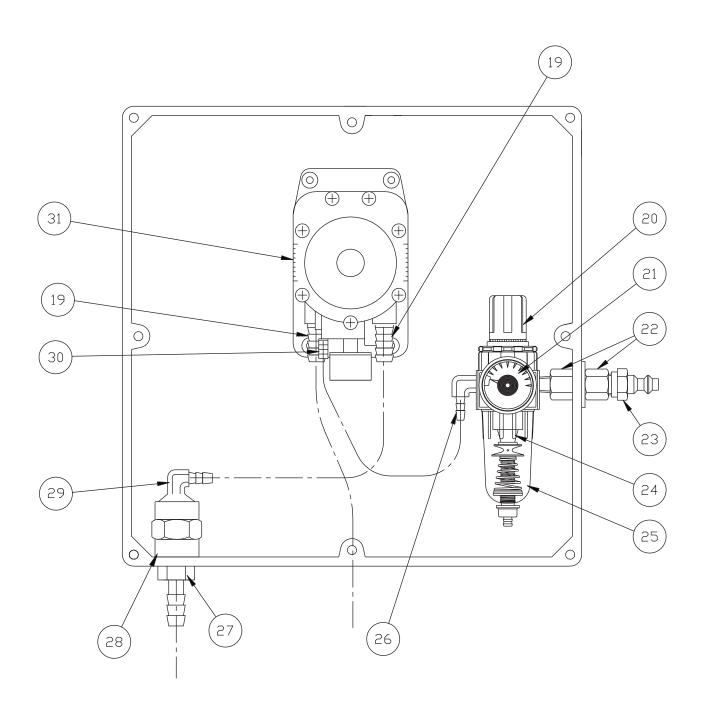

FRONT VIEW - CONTROL BOX COVER REMOVED

PARTS LIST

| ITEM | PART NO. | DESCRIPTION |
|------|------------|--|
| 1 | CRT15 | 15 GALLON CART |
| 2 | H38-50' | 50' X 3/8" DISCHARGE HOSE |
| 3 | HBSS1238 | HOSE BARB 1/2" X 3/8" |
| 5 | PSG12 | POLY SPRAY GUN |
| 6 | PW124-120 | POLY WAND 4 IN SCH 120 |
| 7 | ST2520 | FAN SPRAY TIP |
| 8 | COT | COTTER PIN |
| 9 | FWAX15 | AXEL WASHER |
| 10 | WB5 | POLY BUSHING |
| 11 | W15 | RUBBER WHEEL |
| 12 | PL1212-S15 | 12X12 POLYETHYLENE LID & DECAL |
| 13 | PB12126 | 12X12X6 POLYETHYLENE BOX |
| 14 | DFP4 | DRUM FILL CAP |
| 15 | D-15 | 15 GALLON DRUM ASSEMBLY W/SUCTION HOSE |
| 16 | H38-33" | SUCTION HOSE |
| 17 | HB1438 | POLY HOSE BARB 1/4" X 3/8" |
| 18 | STR14 | STRAINER |
| 19 | HB5638 | PUMP HOSE BARB 3/8" |
| 20 | R25 | REGULATOR & FILTER COMBO, INCLUDES ITEM# 28 & 29 |
| 21 | AG100 | AIR GAUGE |
| 22 | BA25 | 1/4" ADAPTER |
| 23 | AP25 | AIR PLUG |
| 24 | AFR25 | REPLACEMENT AIR FILTER FOR R25 |
| 25 | ABR25 | REPLACEMENT AIR BOWL FOR R25 |
| 26 | HBBEL1414 | HOSE BARB ELBOW 1/4" X 1/4" |
| 27 | HBSS1238 | HOSE BARB 1/2" X 3/8" |
| 28 | SC1212 | 1/2" PIPE COUPLING |
| 29 | HBSSEL1238 | HOSE BARB ELBOW 1/2" X 3/8" |
| 30 | HB14P | PUMP HOSE BARB 1/4" |
| 31 | P56 | PUMP |
| | SGA14 | SANITIZER GUN ASSEMBLY FOR 3/8 IN HOSE |

SAFETY INSTRUCTIONS

- 1. ALWAYS WEAR SAFETY GOGGLES AND PROTECTIVE GLOVES WHILE OPERATING FOAM UNIT.
- AVOID CONTACT OF CLEANING AGENT WITH SKIN AND EYES. IF CONTACT OCCURS RINSE AFFECTED AREA WITH WATER FOR 15 MINUTES AND GET MEDICAL ATTENTION IF NEEDED.
- 3. AFTER USE, RELIEVE ALL REMAINING PRESSURE IN THE SYSTEM BY UNPLUGGING THE AIR LINE FROM THE UNIT (ITEM# 23) AND OPENING THE DISCHARGE BALL VALVE (ITEM# 5).
- 4. NEVER POINT THE DISCHARGE WAND AT ANYONE.

SET-UP INSTRUCTIONS

- 1. REMOVE ALL PARTS FROM SHIPPING BOX.
- 2. CLIP THE CABLE TIE HOLDING THE COTTER PINS (ITEM# 6) AND AXLE WASHERS (ITEM# 7) FROM THE LEG OF THE CART.
- 3. PLACE ONE OF THE WASHERS (ITEM# 9) ON ONE OF THE AXLES, THEN SLIP A WHEEL (ITEM# 11) ON THE AXLE FOLLOWED BY A SECOND WASHER. THEN INSERT A COTTER PIN (ITEM# 8) INTO THE HOLE IN THE AXLE AND BEND THE COTTER PIN TO KEEP IT FROM FALLING OUT. REPEAT THIS FOR THE OTHER SIDE.

OPERATION INSTRUCTIONS

- 1. FILL THE DRUM WITH DESIRED COMBINATION OF CHEMICAL AND WATER.
- 2. PLUG AN AIR LINE INTO THE AIR INLET FITTING (ITEM# 23)
- 3. HOLD THE DISCHARGE WAND SECURELY IN HAND AND SPRAY DESIRED AREA.

WARNING: NEVER POINT THE DISCHARGE WAND AT ANYONE.

4. RELIEVE PRESSURE FROM DISCHARGE HOSE AFTER USE.

ACCEPTABLE PRODUCTS

UNACCEPTABLE PRODUCTS

- ALKALINE CLEANERS

- ALL HYDROCARBONS

- CAUSTIC CLEANERS

- D-LIMONENE

- SANITIZERS
- ACIDS