


Chemical Transfer Unit

Service Manual

CTX1 - CTX5

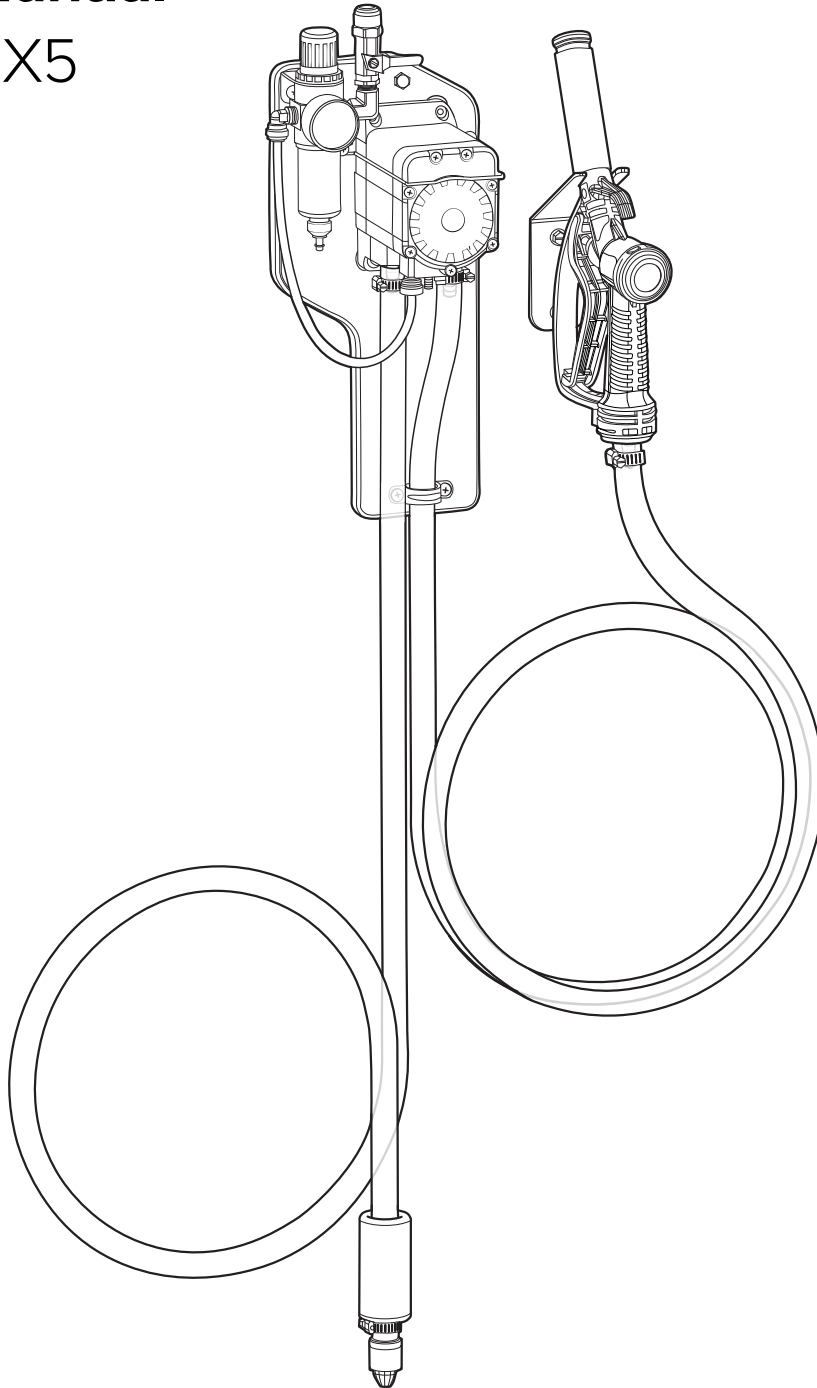

READ ALL INSTRUCTIONS BEFORE USING OR
SERVICING THIS UNIT. KEEP THIS MANUAL IN A
LOCATION THAT IS READILY AVAILABLE TO USERS
AND SERVICE TECHNICIANS.

English (Original Instructions)



Scan this code for
service manual



Safety

WARNING

PEOPLE OR OBJECTS CAN BE HURT OR DAMAGED IF THIS UNIT IS NOT USED CORRECTLY!



Failure to read all the instructions before operating the unit may result in personal injury or death from the improper use or the chemical solution. Anyone handling, operating or using the unit must read and understand the instructions in the manual. The buyer assumes all responsibility for safety and proper use in accordance with the instructions.



Using or servicing the unit without appropriate personal protective equipment (PPE) may result in serious injury such as burns, rashes, eye, throat or lung damage and death. Always wear PPE as indicated in the Safety Data Sheet (SDS) when using or servicing the unit. Protect eyes, skin, and lungs against drifting spray.



Chemical solutions may pose a health risk and death if they contact the skin or eyes, are inhaled or swallowed. Always read and follow all chemical safety precautions and handling instructions provided by the chemical manufacturer and the SDS associated with the chemical solution before using the unit.



Pressure within the equipment may cause an unexpected release of the chemical solution and cause serious injury such as burns, rashes, eye damage, throat or lung damage and death. Always depressurize and clean the unit after each use. Never leave the unit unattended while pressurized.

Using the unit with fluid temperatures above 100°F (37.8°C) may result in scalding, burns, serious injury or death. DO NOT use a solution with a temperature above 100°F (37.8°C).

Operating the unit when damaged or leaking may result in exposure to chemical solutions, serious injury or death. Never use the unit if it is damaged or leaking.

Never point the discharge wand at yourself, another person, or any object you do not want covered in chemical.



Using incoming air pressure exceeding 100 psi (6.9 bar) may result in pressure buildup, explosion, serious injury or death. DO NOT exceed 100 psi (6.9 bar) incoming air pressure when operating the unit.

Use of hydrocarbons and flammable products may result in explosions, fire and serious injury or death. Never use hydrocarbons or flammable products with the unit.



Mixing an alkaline with an acid may result in a chemical reaction. Overheating of the mixture may cause it to splatter caustic compounds or release hazardous fumes, gas and vapors. Always flush the unit with fresh water thoroughly when switching from an alkaline to an acid or an acid to an alkaline.

NOTICE

Servicing or modifying this unit with parts not listed in this manual may cause the unit to operate improperly. Do not use unauthorized parts when servicing the unit.

Use of an air lubricator before the unit may result in diminished performance and damage to the unit. Do not use an air lubricator before the unit.

Moisture in the air lines will damage the pump and diminish the pump life. The air must be filtered, clean, dry and free of moisture. If needed, install an air dryer before the unit.

PROTECT THE ENVIRONMENT



Please dispose of packaging materials, old machine components, and hazardous fluids in an environmentally safe way according to local waste disposal regulations.

Service Guide

WARNING

Performing any maintenance with the unit pressurized and connected to the air supply may result in serious injury or death. Always ensure that the unit has been depressurized and disconnected from the air supply before conducting any maintenance. Servicing or modifying this unit with parts not listed in this manual may cause the unit to operate improperly. Do not use unauthorized parts when servicing the unit.

Maintaining Your Unit

To keep your unit operating properly, periodically perform the following maintenance procedures:

- Inspect the pump for wear and leaks.
 - Inspect all hoses for leaks or excessive wear. Make sure all hose clamps are in good condition and properly secured.
 - Replace the filter located within the air regulator as needed. Clean by unthreading the air regulator bowl from the air regulator.
 - Check the suction line and strainer for debris. Clean as needed.
 - Drain your air compressor tank on a regular basis to help extend pump life. An air source with a high moisture content will accelerate pump wear.
- Note:** If your air source has a high moisture content, install a water separator to the air fitting.

Servicing Your Unit

Most repairs on the unit can be performed with the following tools:

- Crescent wrench
- $\frac{7}{16}$ in. (11 mm) open-ended wrench
- Flat head screwdriver
- #2 Phillips head screwdriver
- Thread seal tape
- Hose cutters
- Knife

Troubleshooting Your Unit

If your unit is not operating properly, try using these troubleshooting tips:

Issue	Solution
Air regulator bowl or air filter has debris such as water, oil, or rust particles	<ul style="list-style-type: none"> • Clean by unthreading the air regulator bowl from the air regulator.
Pump is cycling faster than normal	<ul style="list-style-type: none"> • Verify product is getting to the pump with these steps: <ol style="list-style-type: none"> 1. Inspect suction line foot valve for buildup. 2. Examine the suction hose for holes or cracks. 3. Ensure chemical suction line is fully submerged in the chemical jug. • If these items are confirmed, the pump may need to be replaced.
Pump is cycling slower than normal	<ul style="list-style-type: none"> • Verify unit is receiving proper air supply. Air supply should read at 50 psi (3.4 bar). • Restriction on the outlet side of the unit may cause issues. Inspect outlet hose and fittings for build up. Clean or replace as needed. • Confirm air inlet valve is open completely. • Pump may need to be replaced.
Air passes through the pump without cycling	<ul style="list-style-type: none"> • The pump needs to be replaced.
The unit operates at a reduced pressure	<ul style="list-style-type: none"> • Check suction line and strainer for debris or damage. Clean or replace as needed. To prevent damage to the unit, the strainer must always be used. • Check the air compressor supplying the unit. If the pressure is less than 40 psi (2.8 bar), turn off the unit until the compressor can catch up. • If the air supply is 50 psi (3.4 bar) or above, check the air gauge, which should read near 50 psi (3.4 bar). If the air gauge reads more or less than 50 psi (3.4 bar), adjust the pressure by turning the knob on the top of the air regulator.

Chemical Transfer Unit

CTX1

CTX1:


Chemical transfer unit - exposed pump - one product - Santoprene pump

Additional pump options:

CTX1K: Kalrez pump

CTX1V: Viton pump

Item number		Description
1	R25	Air regulator - two ¼ in. FPT ports - two ½ in. FPT ports - includes filter and bowl
2	AG100	Air gauge - ⅜ in. NPT - 100 PSI dry model
3	QFEL14P	Fixed elbow ¼ in. tube x ¼ in. MPT - polypropylene
4	S1012-HL	Screw - #10 x ½ in. - stainless steel - round head Phillips - hi lo thread
5	TB14BL-PU	¼ in. od blue polyurethane tubing - available per ft.
6	QF1438	Quick fit - ¼ MPT x ⅜ od tube - polypropylene
7	BVB14	Ball valve - brass - nickel plated - air inlet valve - ¼ in. FPT x ¼ in. FPT
8	SEL14M	Stainless elbow ¼ in. MPT x ¼ in. MPT
9	A P56	Pump with Santoprene seals - includes hose barbs, air fitting, and exhaust barb
	B P56K	Pump with Kalrez seals - includes hose barbs, air fitting, and exhaust barb
	C P56V	Pump with Viton seals - includes hose barbs, air fitting, and exhaust barb
10	BRKT-P56	Pump bracket - stainless steel
11	QF14PAF	Quick fit - ¼ MPT pump air fitting
12	CLMP12	Clamp - PVC - for ½ in. hose

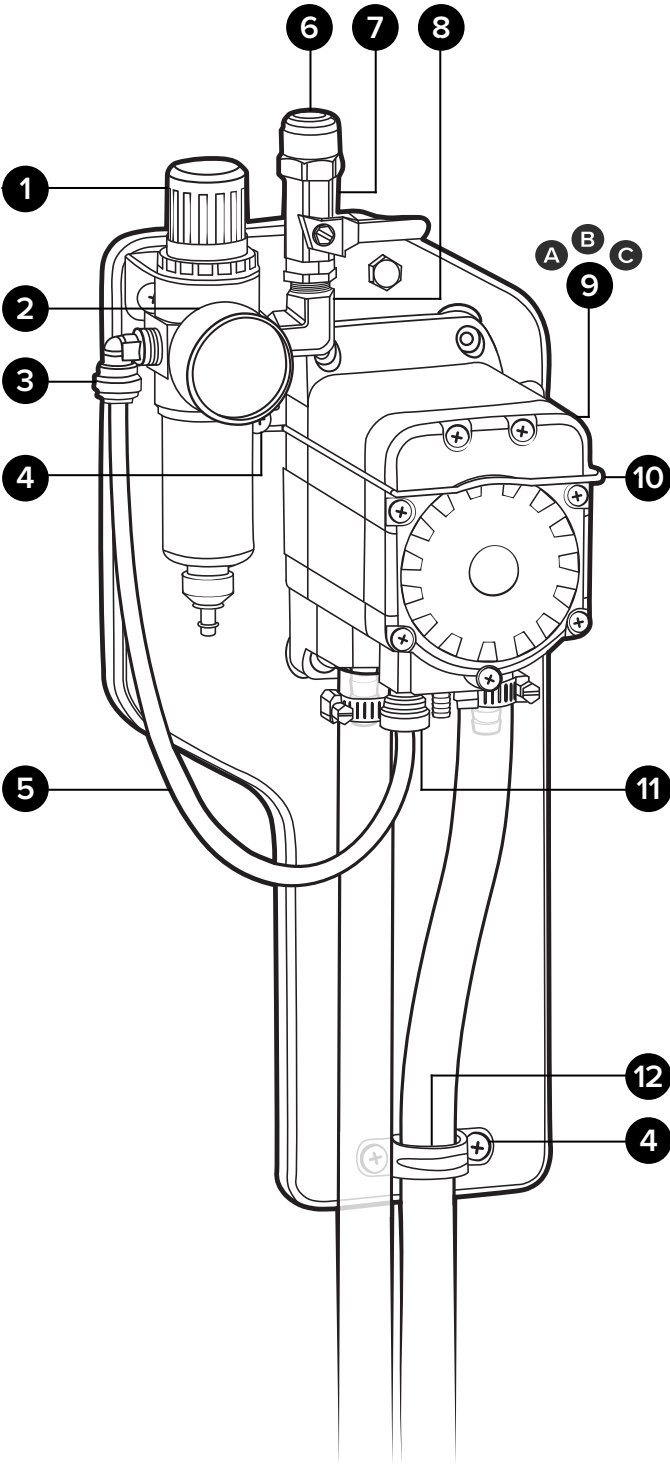

Chemical Transfer Unit

CTX2 - CTX5

CTX2:

Chemical transfer unit - exposed pump - two product - Santoprene pumps

Additional pump variation examples:

CTX2VK: One pump Viton, one pump Kalrez pump seals




CTX3V: Three pumps with Viton pump seals

CTX4SSKK: Two pumps Santoprene, two pumps Kalrez

CTX5: Five pumps with Santoprene pump seals

Note: No option code needed for Santoprene only units

Item number		Description
1	R25	Air regulator - two ¼ in. FPT ports - two ½ in. FPT ports - includes filter and bowl
2	QFEL14P	Fixed elbow ¼ in. tube x ¼ in. MPT - polypropylene
3	AG100	Air gauge - ⅜ in. NPT - 100 PSI dry model
4	QF14PAF	Quick fit - ¼ MPT pump air fitting
5	QFSOV14	Shut off valve ¼ in. tube - polypropylene
6	TB14BL-PU	¼ in. od blue polyurethane tubing - available per ft.
7	QFT14	Union tee ¼ in. tube - polypropylene
8	QF1438	Quick fit - ¼ MPT x ⅜ od tube - polypropylene
9	BVB14	Ball valve - brass - nickel plated - air inlet valve - ¼ in. FPT x ¼ in. FPT
10	SEL14M	Stainless elbow ¼ in. MPT x ¼ in. MPT
11	S1012-HL	Screw - #10 x ½ in. - stainless steel - round head Phillips - hi lo thread
12	BRKT-P56	Pump bracket - stainless steel
13	A P56	Pump with Santoprene seals - includes hose barbs, air fitting, and exhaust barb
	B P56K	Pump with Kalrez seals - includes hose barbs, air fitting, and exhaust barb
	C P56V	Pump with Viton seals - includes hose barbs, air fitting, and exhaust barb
14	CLMP12	Clamp for ½ in. hose - PVC

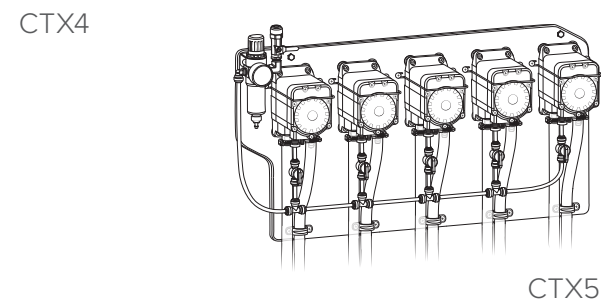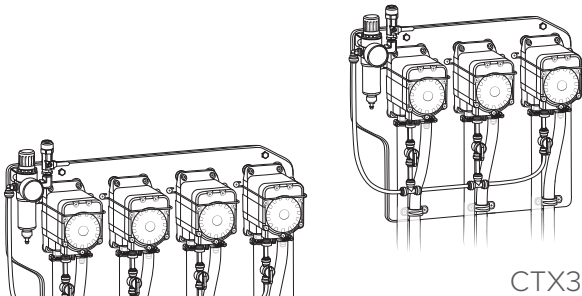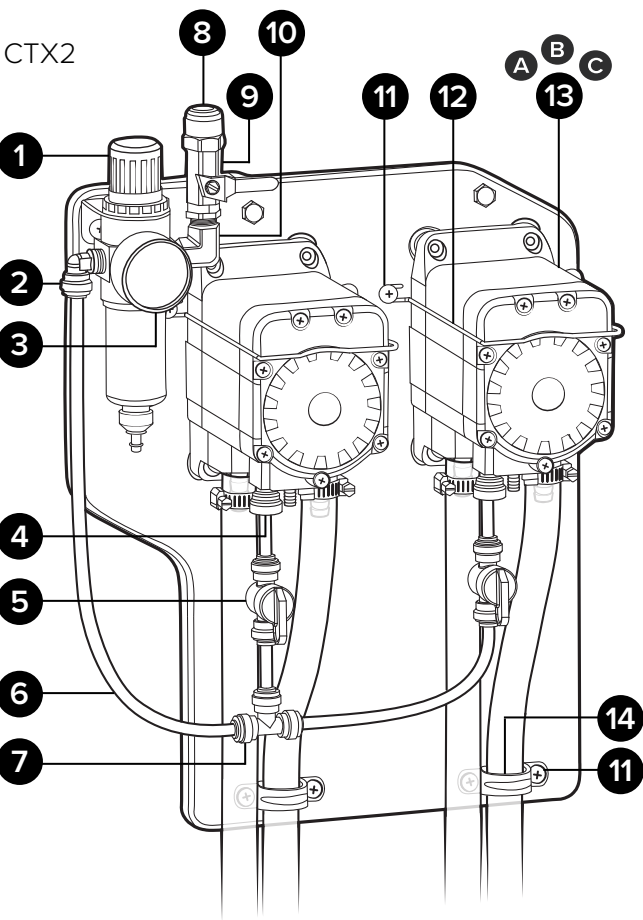

Suction Assembly

SCTNA-WL-HA12CL-8-CB-AP:


Suction assembly for chemical transfer units - includes suction valve, hose, weight, and pump hose barb - for Santoprene pump

Additional suction assembly options:

SCTNA-WLK-HA12CL-8-CB-AP: Kalrez pump

SCTNA-WLV-HA12CL-8-CB-AP: Viton pump

Item number		Description
1	A HB5638	Hose barb for P56 pump - EPDM o-ring
	B HB5638K	Hose barb for P56K pump - Kalrez o-ring
	C HB5638V	Hose barb for P56V pump - Viton o-ring
2	H12CL-CB	½ in. id clear braided hose - PVC - available per ft.
3	SHW3	Suction hose weight - 1 5⁄16 in. id x 1 ½ in od x 3 ¼ in. long - pvc coated stainless
4	SSC12	Screw band clamp - stainless steel - for ½ in. hose
5	FV2	Foot valve - Viton - black

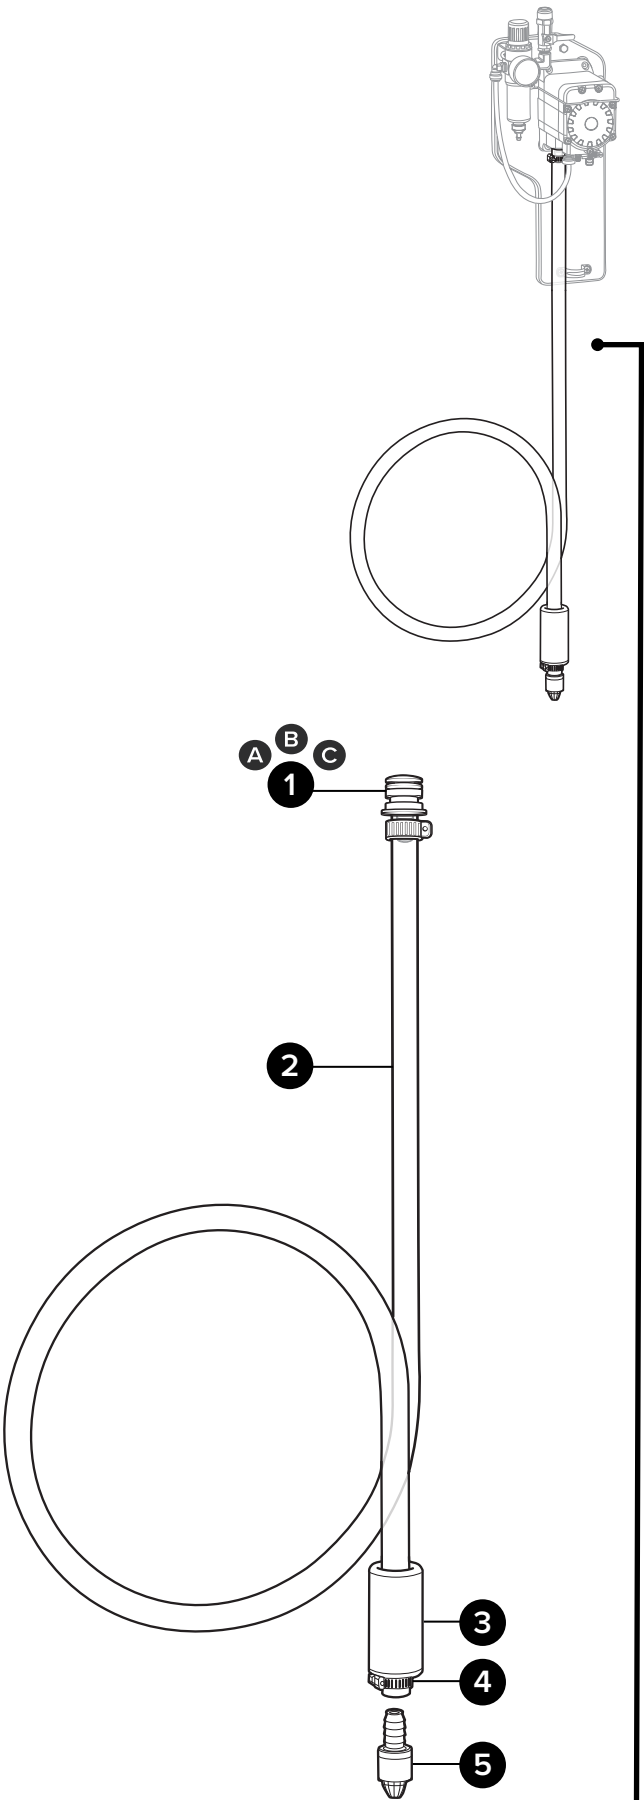

SCTNA-WL-HA12CL-8-CB-AP

Discharge Assembly

WMA-PFG:

Bracket assembly for poly fill gun - includes mounting hardware

Item number		Description
1	WMS14A	Wall mount screw anchor -#14 x 1 ¼ in. - plastic - 5⁄16 in. drill size
2	WMBRKT-PFG	Wall mount bracket - stainless steel - for poly fill gun
3	WMS14	Wall mount screw - #14 x 1 ¼ in. - stainless steel - hex head slotted

PFGA-WH-H12CL-8-CB-HB56:



Poly fill gun assembly - white - includes clearbraid hose, hose barb, and screw band clamps - for Santoprene pump

Additional discharge assembly options:

PFGA-WH-H12CL-8-CB-HB56K: Kalrez pump

PFGA-WH-H12CL-8-CB-HB56V: Viton pump

Item number		Description
4	A HB5638	Hose barb for P56 pump - EPDM o-ring
	B HB5638K	Hose barb for P56K pump - Kalrez o-ring
	C HB5638V	Hose barb for P56V pump - Viton o-ring
5	PFG12HB	White fill gun - polypropylene - ½ in. hose barb - Hastelloy spring - Viton seals
6	SSC12	Screw band clamp - stainless steel - for ½ in. hose
7	H12CL-CB	½ in. id clear braid hose - PVC - available per ft.

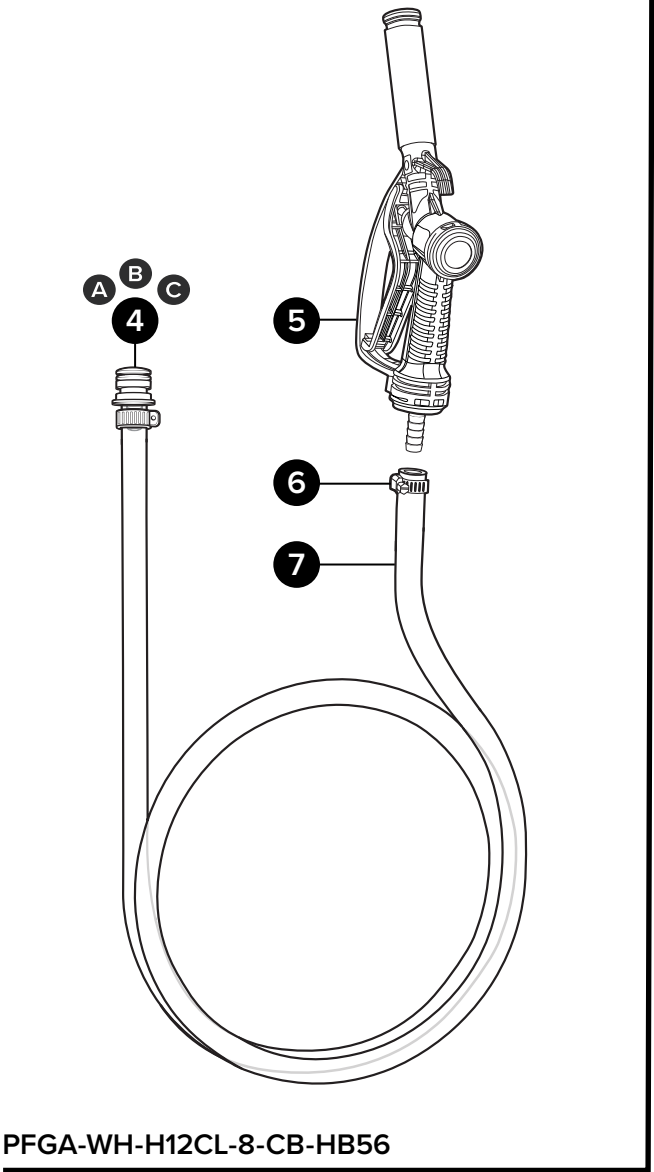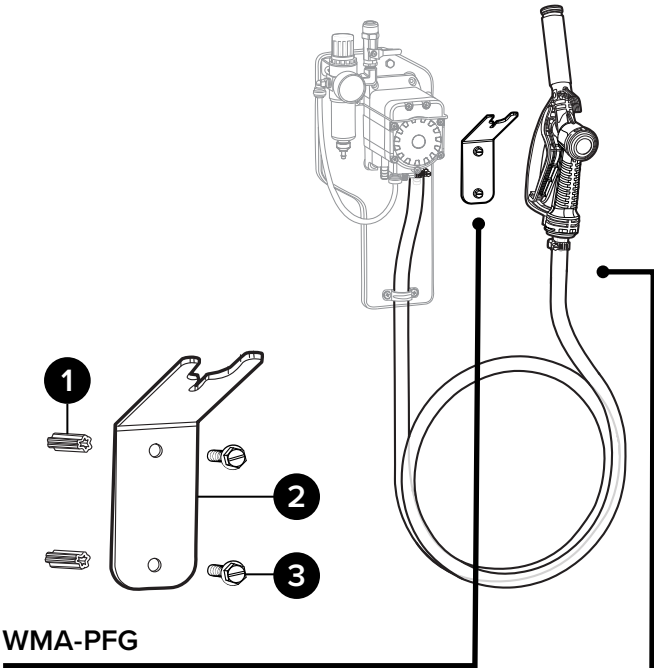


Regulator Assembly

RGA-R25-CTX:

Air regulator assembly for chemical transfer units - includes air gauge, quick fit, hose, air inlet valve, bracket, and elbows

Item number		Description
1	BRKT-RGA	Bracket for mounting air regulator assembly - stainless steel
2	R25	Air regulator - two ¼ in. FPT ports - two ⅜ in. FPT ports - includes filter and bowl
3	BVB14	Ball valve - brass - nickel plated - air inlet valve - ¼ in. FPT x ¼ in. FPT
4	QF1438	Quick fit - ¼ MPT x ⅜ od tube - polypropylene
5	SEL14M	Stainless elbow ¼ in. MPT x ¼ in. MPT
6	AG100	Air gauge - ⅜ in. NPT - 100 PSI dry model
7	S1012-HL	Screw - #10 x ½ in. - stainless steel - round head Phillips - hi lo thread
8	QFEL14P	Fixed elbow ¼ in. tube x ¼ in. MPT - polypropylene
9	TB14BL-PU	¼ in. od blue polyurethane tubing - available per ft.

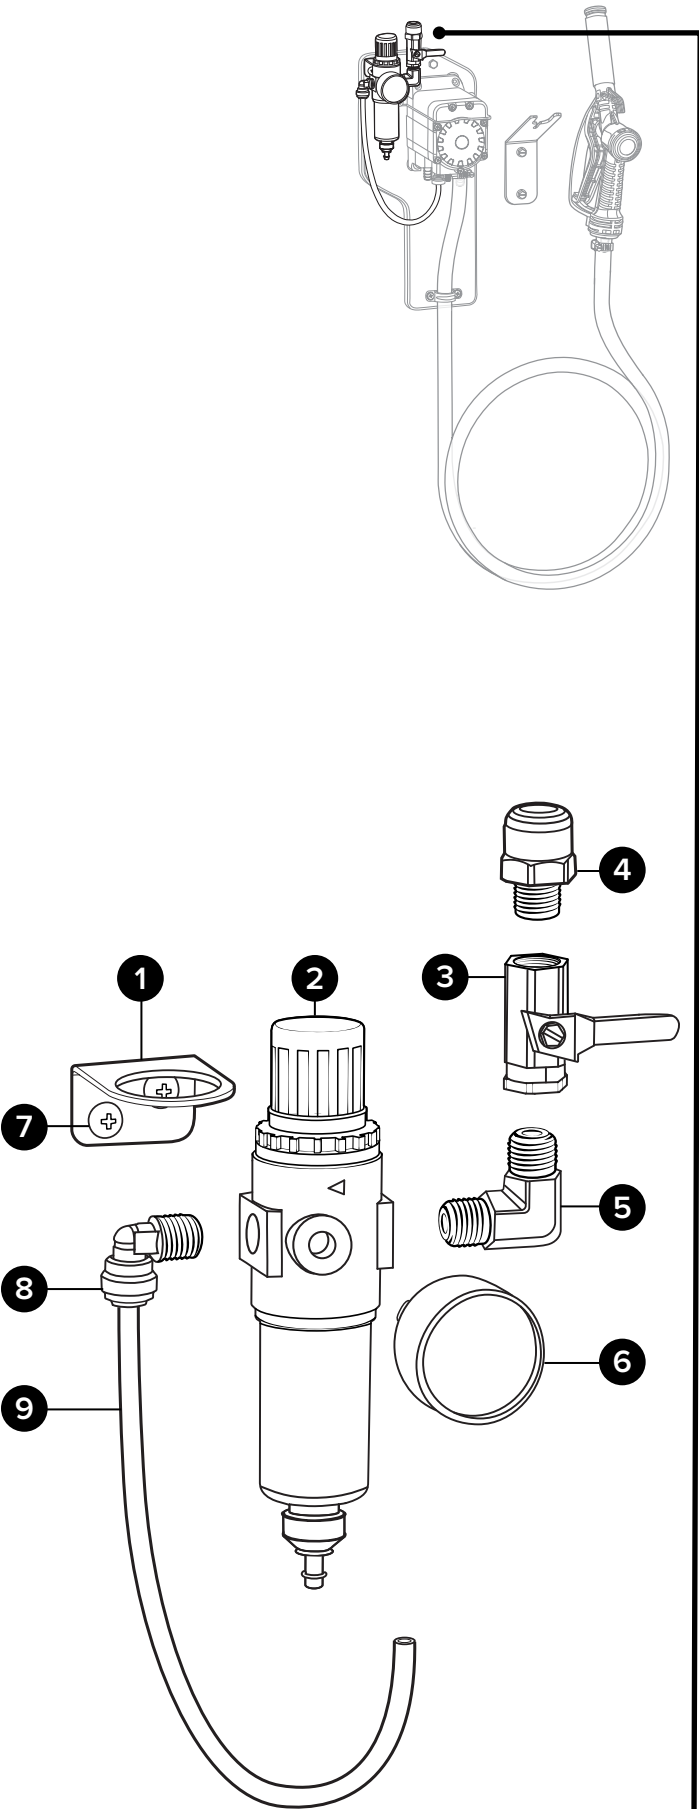

RGA-R25-CTX