

---

**READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT**

User Manual for Models:

---

**GK6T**

| Foam Enhancer Tip Assembly |

---

**READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT**

## READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



### WARNING

#### Avoid Personal Injury



1. Always wear protective clothing, gloves, and eye wear while servicing the foam unit.



2. Avoid contact of cleaning agent with skin and eyes. If contact occurs, see MSDS sheet for further first aid measures.




3. Follow safety instructions of chemical manufacturer (MSDS).

#### Installation Instructions:

1. Read all instructions before installation
2. Remove all parts from box.
3. Select desired area to mount the control box. It is recommended that the control box is to be mount on a vertical wall
4. Mount the spray tip assembly (GK6T) in the desired location using the stainless steel brackets (SSLB 14). Note: When drilling holes for the plastic anchors provided with the screws, use a 5/16 inch drill bit.
5. After the control box and nozzle assembly are mounted, run ½ inch tubing from the solution discharge (QF1212) to the nozzle assembly (GK6T).
6. See doorway foam unit manual for furthur instruction.

**READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT**

**Parts list:**

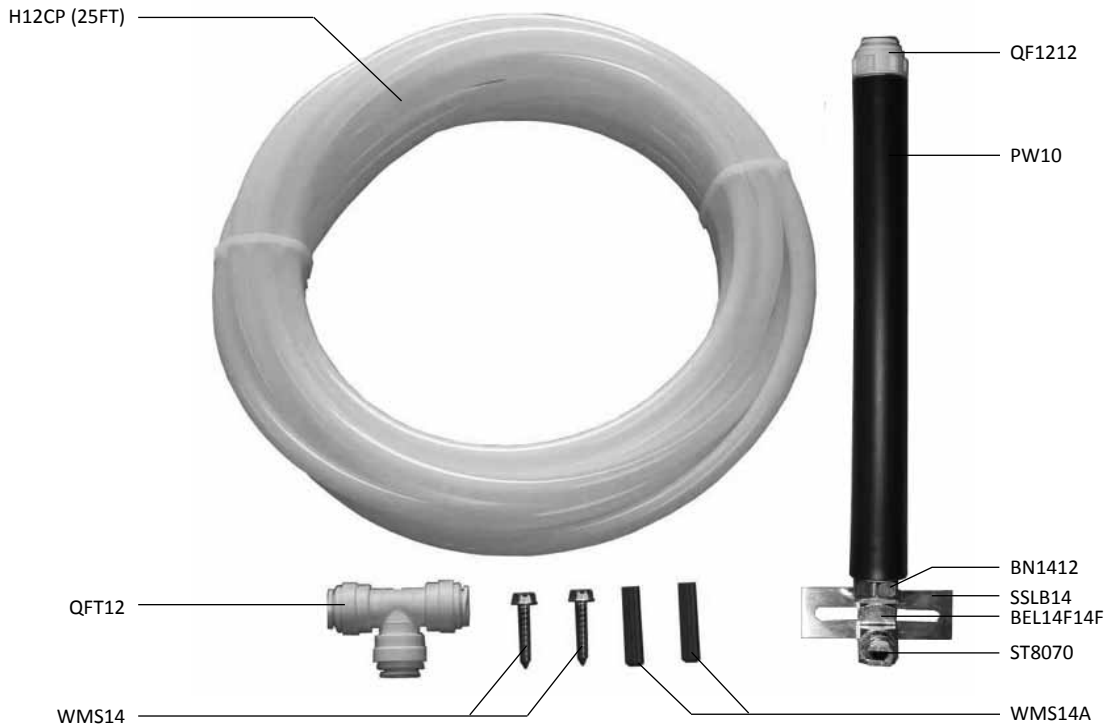

Item Number	Description
BEL14F14F	BRASS ELBOW 1/4in FPT X 1/4in FPT
BN1412	BRASS HEX REDUCER NIPPLE 1/4in X 1/2in MPT
H12C	1/2in CLEAR POLYVINYL TUBING
H12CP	1/2IN OD POLYTUBE NATURAL
PW10	3/4in BLACK POLY PRO X 10in - FPTBE - SCH.80
QF1212	MALE CON. 1/2in TUBE X 1/2in MPT
QFT12	UNION TEE 1/2in TUBE
SSLB 14	14GA SS BRACKETS W/SLOTS
ST8070	VEEJET NOZZLE, BRASS 8070
TW916	1/2 INT TOOTH L/W 410SS
WAAD-1X3	BROWN WADDING- 1" BY 3" DIE CUT
WMS14	14 X 1 1/4 HEX W/H SMS SLOTT, S/S
WMS14A	5/16 X 1 1/2 STRAIGHT PLASTIC ANCHOR