
USER MANUAL

**MODEL NUMBER:
CFS-TL
AND RELATED UNITS**

**Twin-line Central Foam Station
English (Original Instructions)**

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

WARNING



Read this manual completely and understand the machine before operating or servicing it.

- Read all instructions before installing or operating unit.
- Always wear appropriate personal protective equipment (PPE) when operating or servicing unit.
- Always follow all chemical safety precautions and handling instructions provided by the chemical manufacturer and Safety Data Sheet (SDS).
- If this unit is modified or serviced with parts not listed in this manual, the unit may not operate correctly.
- Never point the discharge wand at yourself, another person, or any object you do not want covered in chemical.
- Always depressurize unit after use (as described in the After Use Instructions). Always store unit depressurized, with the discharge valve in the closed position.
- Do not exceed an incoming air pressure of 100 psi (7 bar).
- Do not exceed a fluid temperature of 100°F (37°C).
- Always flush the unit with fresh water thoroughly when switching from an alkaline to an acid or an acid to an alkaline.
- Never use unit with hydrocarbons or flammable products.
- Only use clean and dry air. Air must be filtered and free of moisture or pump life will be diminished. If needed, install an air dryer before unit.
- Do not use an air lubricator before the unit.
- Never use unit if it is damaged or leaking.

PROTECT THE ENVIRONMENT

Please dispose of packaging materials, old machine components, and hazardous fluids in an environmentally safe way according to local waste disposal regulations.



Always remember to recycle.

*Specifications and parts are subject to change without notice.

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

REQUIREMENTS	
Compressed air requirements	40-80 psi (3-5 bar) with 3-6 cfm (85-170 l/min)
Liquid temperature range	40-100°F (4.4-37°C)
Central system requirements	Pre-mixed solution must be supplied by a properly sized header system at 1 gpm (3.8 l/m) and 40 to 80 psi (3 to 5 bar).
Chemical compatibility	Chemical products used with this equipment must be formulated for this type of application and compatible with unit materials. For more information on chemical compatibility, consult the manufacturer or SDS for your product or contact our customer service department.

SPECIFICATIONS	
Power type	Compressed air
Chemical pickup type	Draws from pre-mixed centrally-supplied solution
Number of products unit can draw from	One centrally-supplied product
Discharge hose diameter/length	25 ft. (7.6 m) twin-line tubing, with 1/4 in. (6.35 mm) inside diameter (coiled and bonded)
Discharge wand/tip type	Polypropylene spray gun with 65° fan tip
Output distance	4-6 feet (1.2-1.8 m)
Output volume	6 gal/min (22.7 l/min) of foam
Flow rate*	1 gal/min (3.8 l/min)

*Dilution rates and flow rates given are based on chemical with viscosity of water and factory air pressure settings.

Installation Instructions:

To Install Control Box:

1. Remove all components from packaging.
2. Select desired area to mount the control box. **Note:** The control box should be mounted to a vertical wall.
3. Attach the control box mounting feet to the back of the control box, using the four screws provided in the parts package.
4. Mount the control box to the wall using four of the screws and plastic anchors provided in the parts package. **Note:** To drill holes for the plastic anchors, use a 5/16 inch drill bit.
5. Connect the coiled discharge tubing to the bulkhead fittings on the bottom of the control box - red tube to RED label, blue tube to BLUE label.

To Connect Control Box to Header Supply Line:

1. After control box has been installed, connect the air inlet hose barb provided in the parts package to the air inlet valve located on the top of the control box. Then attach a 3/8 inch I.D. air line from your air compressor to the air inlet hose barb, and secure it with the smaller hose clamp provided in the parts package.
2. Connect the control box to the pre-mixed solution supply line from the chemical storage area. Connection to control box is a 1/4 inch O.D. push-to-connect fitting located on the top of the unit. Install solution inlet valve in-line above the unit (install in closed position). Inlet tubing not provided.

Note: On new installations, make sure to flush the central system lines with water before connecting the unit. This helps remove any debris in the lines that could negatively impact the function of the unit.

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

Operation Instructions:

1. Follow all instructions from chemical manufacturer.
2. With the discharge trigger handle in the closed position, open the air inlet valve and solution inlet valve.
3. To start foaming, point discharge handle assembly at area you wish to foam and squeeze the trigger handle to begin foaming. Release the trigger handle to stop foaming.
4. While the unit is running and discharging product, adjust the needle valve, located inside the control box, as needed to regulate the wetness or dryness of the foam following the steps below:
 - a. Close needle valve completely in clockwise direction.
 - b. Open needle valve in counter-clockwise direction 2 complete turns.
 - c. Continue to open needle valve in ¼ turn increments, allowing 30 seconds between adjustments, until desired consistency of foam is achieved.

After Use Instructions:

We recommend depressurizing the unit after each use.

1. Close the discharge trigger handle.
2. Shut off the air and solution supply to the unit by closing the air inlet valve and solution inlet valve.
3. Open the discharge trigger handle to relieve any pressure remaining in the system.
4. Close the discharge trigger handle after all pressure has been released from the unit. Store the unit with the discharge trigger handle in the closed position.

Maintenance Instructions:

To keep your foam unit operating properly, periodically perform the following maintenance procedures:

Note: Always ensure that the unit has been depressurized, and disconnected from the air supply before conducting any maintenance.


- Inspect all hoses for leaks or excessive wear. Make sure all hose clamps are in good condition and properly secured.

Troubleshooting Instructions:


- Check to ensure that the discharge tubing has no kinks that could obstruct fluid flow.
- If foam discharge is inconsistent or sporadic, the needle valve and/or air regulator may be set improperly. If this occurs, readjust the needle valve as described in *Operation Instructions*.
- Make sure proper foaming chemical and concentration is being used.
- If foam comes out wet, no matter where the needle valve is positioned, the check valve may need to be replaced.
- If the unit foams at a reduced pressure:
 - o Check the air compressor supplying the unit. If the pressure is less than 40 psi, turn the foam unit off until the compressor can catch up.
 - o If the air supply to the unit is sufficient, check the air gauge inside the control box. The air pressure should be roughly equivalent to the incoming solution pressure.

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

CONTROL BOX ITEM NUMBER: CFS-TL-CB

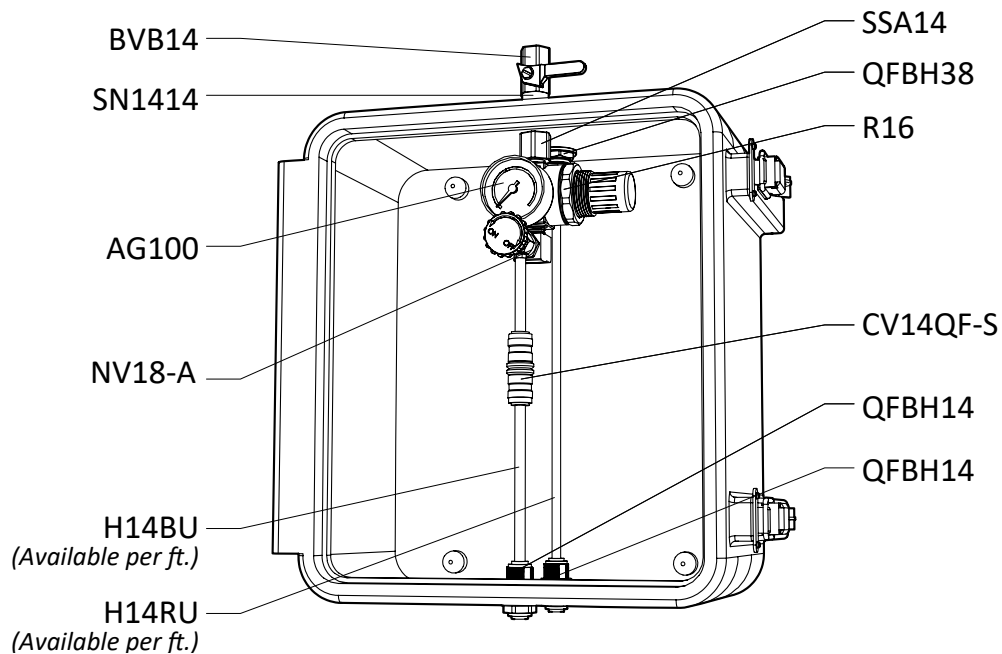

HOSE AND WAND ASSEMBLY ITEM NUMBER: CFS-TL-HA25

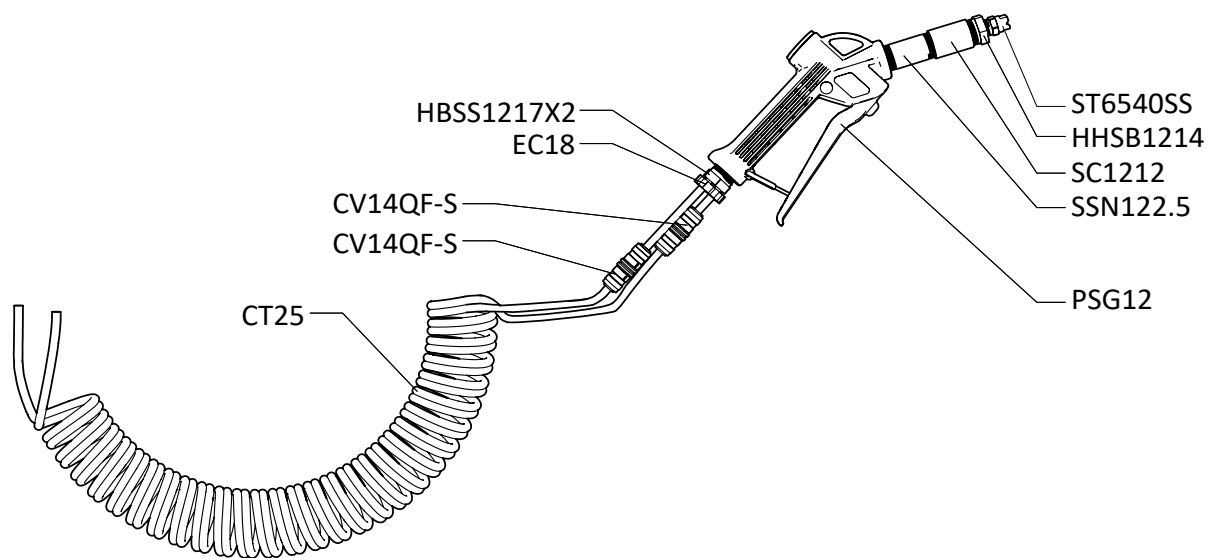

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

ITEM NUMBER	DESCRIPTION		
AG100	1.5 INCH DRY MODEL 20 DUAL SCALE GAUGE	<i>PBFT-PP</i>	MOUNTING FEET FOR POLYBOX - PB16138 - POLYPROPYLENE
BVB14	AIR INLET VALVE-1/4IN FPT X 1/4IN FPT	<i>PB-LTCH</i>	POLY BOX LATCH FOR PB16138 AND PB12117
CT25	25ft COILED 1/4in POLY URETHANE RED/BLUE TUBING	<i>PB-PIN</i>	STAINLESS STEEL HINGE PIN FOR PB16138 AND PB12117
CV14QF-S	1/4 TUBE X 1/4 TUBE CHK QUICK FIT-SMALL	<i>PL12117</i>	POLY CONTROL BOX LID 12X11X7
EC18	OETIKER CLAMP - 11.3	PSG12	1/2 IN POLY SPRAY GUN WITH O-RING AND GRAY HANDLE & 316SS
FWLG14	FLAT WASHER-0.569 ID X 1.28 OD X .078 THK-18-8 SS	<i>PSGORV</i>	O-RING FOR PSG12-VITON
H12CP	1/2IN OD POLYETHYLENE TUBING - NATURAL COLOR	QF1438	QUICK FIT-1/4 MPT X 3/8 OD TUBE-POLYPROPYLENE
H14BU	1/4in OD BLUE POLYURETHANE TUBING - Available per ft.	QFBH14	BULKHEAD 1/4in TUBE POLYPROPYLENE
H14C	1/4in ID (3/8 in OD) CLEAR PVC TUBING - Available per ft.	QFBH38	BULKHEAD 3/8in TUBE POLYPROPYLENE
H14RU	1/4in OD RED POLYURETHANE TUBING - Available per ft.	QFR3814	REDUCER 3/8in TUBE TO 1/4in TUBE - POLYPROPYLENE
HBB103217	HOSE BARB 10-32 MPT X B4 FITTING	QFSOV38	SHUT OFF VALVE 3/8in TUBE POLYPROPYLENE
HBB103217W	FIBER WASHER FOR HBB103217 - W/ BARB	R16	AIR REGULATOR - 1/4fpt TWO PORT 1/8fpt TWO PORT - NO AIR BOWL/FILTER
HBSS1217X2	STAINLESS HOSE BARB 1/2 MPT X TWIN .170 BARB	S1034FHL	10 X 3/4 PHIL FLAT HI-LO THRD SCREW 18-8
HBSS1438	STAINLESS HOSE BARB 1/4 MPT X 3/8 BARB	SC1212	S.S. COUPLER 1/2in BY 1/2in
HHSB1214	HEX HEAD STAINLESS BUSHING 1/2 MPT X 1/4 FPT	SEL14F	S.S. ELBOW 1/4in FPT X 1/4in FPT
HHSB1418	HEX HEAD STAINLESS BUSHING 1/4 MPT X 1/8 FPT	SN1414	STAINLESS HEX NIPPLE 1/4 MPT X 1/4 MPT
NV18-A	NEEDLE VALVE ASSEMBLY - VALVE, HANDLE, SET SCREW	SSA14	STAINLESS ADAPTOR 1/4 MPT X 1/4 FPT
<i>NV18</i>	NEEDLE VALVE-1/8 IN MPT-10-32F-VALVE ONLY-NO SETS-NO HANDLE	SSC38	STAINLESS SCREW BAND CLAMP FOR 3/8 IN HOSE
<i>NV1032HNDL</i>	BLACK HANDLE FOR NEEDLE VALVE	SSN122.5	STAINLESS PIPE NIPPLE 1/2 MPT X 1/2 MPT- 2.5 IN LONG - SCH 40S
<i>NV1032SETS</i>	SET SCREW FOR HANDLE	ST6540SS	SPRAY TIP-65 DEGREE-4.0 GPM-STAINLESS-1/4 MPT
P18	PLUG 1/8 MPT HEX HEAD 304 SS	WAAD-.75	3/4IN DIA WADDING FOR FOAM UNITS
PB12117-A	POLY BOX ASSEMBLY 12 X 11 X 7 WITH GASKET-LATCH-MOUNTING HARDWARE	WMS14	14 X 1 1/4 HEX W/H SMS SLOTT, S/S
<i>PB12117</i>	POLY CONTROL BOX 12X11X7	WMS14A	5/16 X 1 1/2 STRAIGHT PLASTIC ANCHOR