


55 Gallon Drum Rinse

User Manual

CSTM-DR55

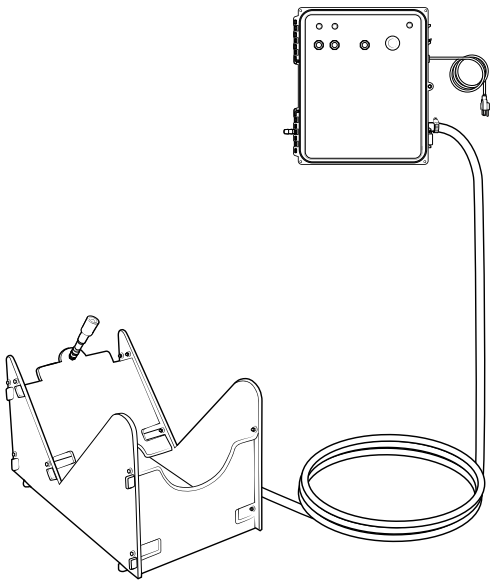

Product Requirements

Water requirements	Minimum flow at water source: 9 gal/min (34.1 l/min) Note: If flow is less than 9 GPM, consider opting for the boosted version
Liquid temperature range	40-190°F (4.4-87.8°C)
Electrical requirements	120 VAC at 60 Hz, 2 amps (GFCI protected outlet)
Operating voltage	120 VAC
Chemical compatibility	Unit is designed to function with water only

Product Specifications

Power type	Water and electric
Discharge line length / diameter	25 ft. (7.6 m) hose, with ¾ in. (19 mm) inside diameter
Flow rate (produced by unit)	9-17 gal/min (34.1-64.4 l/min)
Timer operation type / water usage	Repeat cycle (PLC controlled). <ul style="list-style-type: none">• 30 second triple rinse cycle - 13.5-25.5 gallons (51.1-96.5 liters) 3 cycles of - 30 seconds on, 15 seconds draining• 60 second triple rinse cycle - 27-51 gallons (102.2-193.1 liters) 3 cycles of - 60 seconds on, 15 seconds draining
Nozzle type	Stainless steel spinner
Tubing/fitting sizes	Facility connection to water supply box: ½ in. FNPT

Safety

WARNING

PEOPLE OR OBJECTS CAN BE HURT OR DAMAGED IF THIS UNIT IS NOT USED CORRECTLY!



Failure to read all the instructions before operating the unit may result in personal injury or death from the improper use or the chemical solution. Anyone handling, operating or using the unit must read and understand the instructions in the manual. The buyer assumes all responsibility for safety and proper use in accordance with the instructions.



Using or servicing the unit without appropriate personal protective equipment (PPE) may result in serious injury such as burns, rashes, eye, throat or lung damage and death. Always wear PPE as indicated in the Safety Data Sheet (SDS) when using or servicing the unit. Protect eyes, skin, and lungs against drifting spray.



Chemical solutions may pose a health risk and death if they contact the skin or eyes, are inhaled or swallowed. Always read and follow all chemical safety precautions and handling instructions provided by the chemical manufacturer and the SDS associated with the chemical solution before using the unit.



Pressure within the equipment may cause an unexpected release of the chemical solution and cause serious injury such as burns, rashes, eye damage, throat or lung damage and death. Always depressurize and clean the unit after each use. Never leave the unit unattended while pressurized.

Using the unit with fluid temperatures above 100°F (37.8°C) may result in scalding, burns, serious injury or death. Use extreme caution when handling a solution with a temperature above 100°F (37.8°C).

Operating the unit when damaged or leaking may result in exposure to chemical solutions, serious injury or death. Never use the unit if it is damaged or leaking.



Never point the discharge wand at yourself, another person, or any object you do not want covered in chemical.



Use of hydrocarbons and flammable products may result in explosions, fire and serious injury or death. Never use hydrocarbons or flammable products with the unit.


Mixing an alkaline with an acid may result in a chemical reaction. Overheating of the mixture may cause it to splatter caustic compounds or release hazardous fumes, gas and vapors. Always flush the unit with fresh water thoroughly when switching from an alkaline to an acid or an acid to an alkaline.



Touching damaged electrical cords may result in electrical shock, serious injury or death. Always inspect electrical cords and extension cords for damage before connecting the unit to power supply. DO NOT touch a damaged electrical cord, or extension cord, that is connected to power supply.

NOTICE

Servicing or modifying this unit with parts not listed in this manual may cause the unit to operate improperly. Do not use unauthorized parts when servicing the unit.

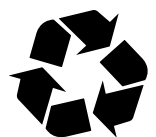

PROTECT THE ENVIRONMENT

Please dispose of packaging materials, old machine components, and hazardous fluids in an environmentally safe way according to local waste disposal regulations.

Using your unit

Installation Instructions

NOTICE

The equipment is shipped in two boxes. Verify all parts are included and undamaged. One box has the complete drum rinse assembly, and the other has the control box assembly, plus hoses.

1. Select desired area to mount the control box.
Note: We recommend mounting the control box at a height of 6 feet or less.
2. Attach the control box mounting feet to the back of the box using the four screws provided in the parts package.
3. Mount the control box to the wall using four of the screws and plastic anchors provided in the parts package.
Note: To drill holes for the plastic anchors, use a $\frac{5}{16}$ inch drill bit.
4. Place the drum rinse base over or near a floor drain, within 25 ft. of the control box.
5. Connect one end of the 25 ft. length $\frac{3}{4}$ in. hose to the hose barb on the drum rinse base, using a $\frac{3}{4}$ in. screw clamp. Connect the other end to the hose barb on the control box marked “Outlet”, using a $\frac{3}{4}$ in. screw clamp.
6. Connect the facilities water source to the “Inlet” side of the control box using a minimum ID hose of $\frac{3}{4}$ in. and a screw clamp.
7. Connect the electrical plug to a properly grounded 120V 15A outlet.

⚠ WARNING

To avoid personal injury and reduce the risk of fire or electric shock, always unplug the electrical plug from the 120V outlet before servicing the equipment.

Operation Instructions

1. Remove both bung plugs from the empty drum.
2. Place the empty drum bung side up next to the drum rinse base, opposite the spray nozzle.
3. Pivot the drum on to the drum rinse base using the rounded edge of base.
4. Rotate the drum so that one of the bung openings lines up concentrically with the spray nozzle shaft. Lower the drum over the spray nozzle shaft until the drum top is resting on the 45° drum rinse base.
5. Ensure that the drum rinse control box switch is in the powered “ON” position. The green indicator light will be illuminated when the system is powered.
6. To begin the rinse process, determine the desired cycle time for the intended cleaning application and press the related button to begin the cycle. When the cycle begins, a corresponding red light will become illuminated and will remain so during the entire cycle.
Note: Do not remove drum from the base until the red light turns off, indicating the cycle is complete.
7. The cleaning cycle will allow for three timed cleaning intervals and two fifteen second draining intervals.
8. If the cleaning cycle needs to be changed or interrupted, press the “RESET” button to reset the existing operation.

After Use Instructions

1. When the cleaning cycle is complete, allow the remaining rinse water to empty from the drum (typically 15 seconds).
2. Pull the drum away from the spray nozzle, and once clear of the shaft, pivot the drum over the rounded edge of the base opposite the spray nozzle, and onto the ground.
3. To power down the system flip the control box switch into the “OFF” position.



Scan this code
for user manual

