


20-Gallon Foam Unit with Undercarriage Foam Attachment



FI-20N-ST+CSTM-UTF

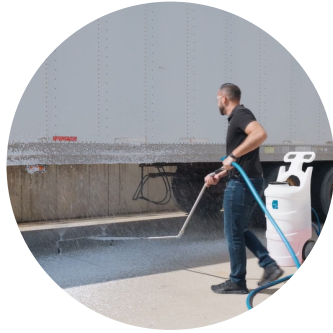

The Good Stuff

- **Biosecurity for vehicles**
the undercarriage foam attachment delivers high quality foam to combat infectious diseases vehicles may carry when entering and leaving a farm or production facility.
- **Natural tank**
see chemical volume levels at a glance.
- **Configure with color**
lids and hoses come in a variety of colors to match your chemical management systems and quickly tell units apart in your chemical cage.

Features

- draws from pre-mixed solution
- powered by compressed air
- hinged back plate provides tool-free access to components
- quick-change pump
- natural color tank for easy visibility of product levels
- integrated hose wraps
- in-line strainer to protect pump from debris
- anti-kink hose protection
- front-facing drain
- hinged lid

Options

- CSTM-UTF attachment
- color coding
 - Lid – 7 colors (BK, BL, GN, YL, RD, PL, OR)
 - Discharge hose – 4 colors (BL, GN, YL, RD)

Industries

- agriculture

Specs

- power typecompressed air
- chemical pickup type.....draws from pre-mixed solution
- number of products unit can draw fromone product
- suction line length/diameter 3/8 in. (9.5 mm) inside diameter
- capacity..... 20 gallons (75.71 liters)
- discharge line length/diameter:.....30 ft. (9 m) hose, with 3/4 in. (19 mm) inside diameter
- discharge wand/tip type7 in. (17.8 cm) stainless steel wand with zero tip and ball valve
- output distance.....25-30 ft. (7-9 m)
- output volume20-45 gal/min (75-170 l/min) of foam
- flow rate.....2 gal/min (7.6 l/min)
- pump seals Santoprene, Viton, or Kalrez
- wheel type: two 10 inch non-marking wheels,

Requirements

- compressed air requirements.....40-80 psi (3-5 bar) with 5-8 cfm (141-227 l/min)
- liquid temperature range.....40-100 ° F (4.4-37 ° C)
- chemical compatibility.....chemical products used with this equipment must be formulated for this type of application and compatible with unit materials and pump seals. For more information on chemical compatibility, consult the manufacturer or SDS for your product or contact our customer service department.