
USER MANUAL

**MODEL NUMBER:
GK5T**

Central Doorway Foam Station

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT



WARNING



Read this manual completely and understand the machine before operating or servicing it.

1. Always wear protective clothing, gloves, and eyewear while operating or servicing unit.
2. Avoid contact of cleaning agent with skin and eyes. If contact occurs, see SDS sheet for further first aid measures.
3. Follow safety instructions of chemical manufacturer (SDS).
4. Incoming air pressure cannot exceed 100 psi (6.9 bar).
5. Do not exceed a fluid temperature of 100°F (37.8°C).
6. Only use clean and dry air. Air must be filtered and free of moisture or pump life will be diminished. If needed, install air an dryer before unit.
7. Do not use air lubricator before the unit.

PROTECT THE ENVIRONMENT

Please dispose of packaging materials, old machine components, and hazardous fluids in an environmentally safe way according to local waste disposal regulations.



Always remember to recycle.

*Specifications and parts are subject to change without notice.

Specifications:

Tip AssemblyNZA-DS-TL-1 (Sold Separately)

Foam output.....30 gallons/minute
(112 liters/minute)

Foaming pattern... 12 feet wide X 5 feet in length (3.66 meters wide X 1.52 meters long)

Requirements:

Compressed air 40 to 80 psi (2.8 to 5.5 bar) with 5 to 10 cfm (141.6 to 283.2 l/min)

Chemical requirements: follow all instructions from chemical manufacturer.

Pre-mixed chemical must be supplied by a properly sized header system at 2 GPM and 40 to 80 PSI (2.8 to 5.5 bar).

Acceptable Products: Quat Sanitizers


DO NOT USE: Acid Quat

1. Always wear safety goggles and protective gloves while servicing foam unit.
2. Avoid contact of cleaning agent with skin and eyes.
3. If contact occurs, see MSDS sheet for further first aid measures.

1. Remove all parts from the shipping box.
2. Mount control box to vertical surface with the screws and anchors provided.
3. Mount the nozzle assembly at the doorway being foamed with the two stainless steel mounting brackets that are included. It is important to mount the nozzle assembly 4 to 6 inches off the floor to ensure proper foam coverage.
4. After the control box and nozzle assembly is mounted, run ½ inch tubing from the solution discharge to the elbow fitting of the nozzle assembly or the foam quality will be reduced. Then run the ½ inch quick tubing from the air output of the control box to the nozzle assembly.
5. Connect compressed air to the control box.
6. Make sure the toggle switch is in the "OFF" position and plug the unit into a GFCI protected 110VAC outlet.
7. Set the timer (see TIMER ADJUSTMENT INSTRUCTIONS)
8. Connect the control box to the header supply line from the chemical room. Use the ½ inch NPT fittings provided. Make sure shut off valve are in between the header supply line and the control box. This will ensure the ability to deactivate the control box if it needs to be serviced.


1. Turn the toggle switch on.
2. Open the needle valve all the way on the fluid side of the control box. Reduce the air pressure to 10 psi or less. As unit is running slowly increase air pressure until desired foam quality is achieved.
3. If foam volume is too high, turn fluid needle valve until desired flow of foam is achieved.
4. Turn the toggle switch on or off to activate or deactivate the system.

1. If the foam sputters out of the spray tip, first, try to adjust the needle valve and the air regulator to create better foam. Second, more chemical may need to be added to thicken the foam.
2. If only liquid or only air comes out the spray tip. First, adjust the needle valve and the air regulator to make sure one of them is not closed. Second, make sure the wiring is all connected. Third, one of the solenoids may need to be replaced. If the liquid still will not come out, check to make sure there is liquid in the tank for the pump, and be sure the pump is running. If the pump is not running, it may need to be replaced.

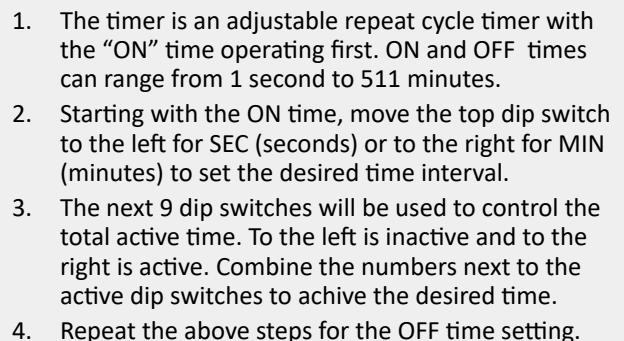

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

Inside View - Control Box

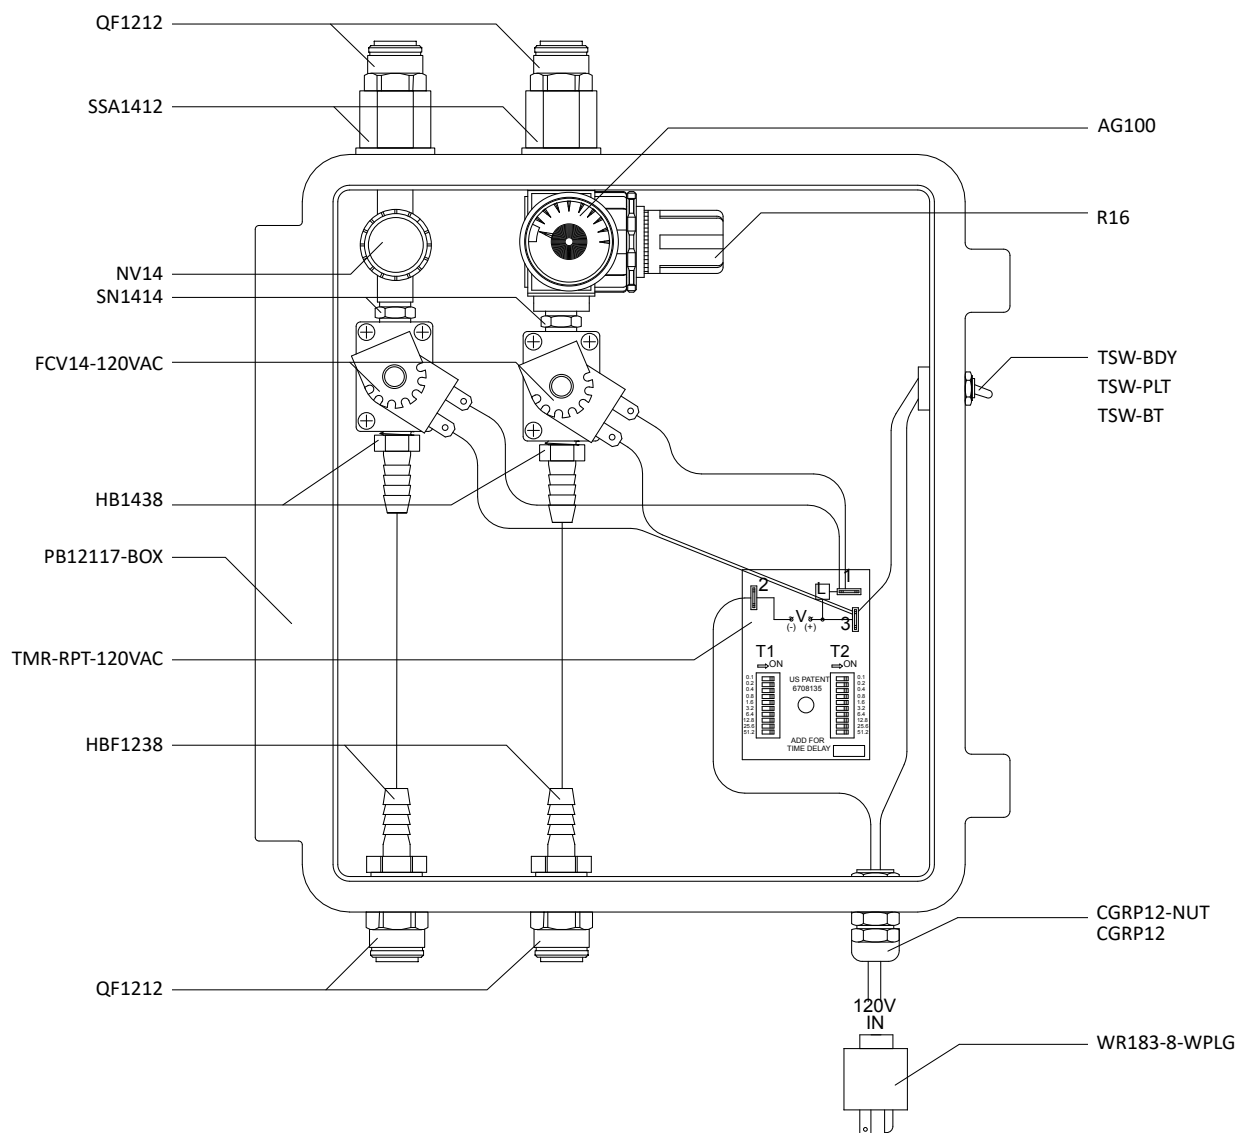

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

ITEM NUMBER	DESCRIPTION
AG100	AIR GAUGE - 1/8IN NPT - 0-100 PSI MARKINGS - DRY MODEL
B1032114	BOLT - 10-32 X 1 1/4IN - STAINLESS STEEL - TRUSS HEAD PHILLIPS
CB-5	CIRCUIT BREAKER ASSEMBLY - 5 AMP - INCLUDES CLEAR BOOT
CB-BT	CLEAR BOOT FOR CIRCUIT BREAKER
CGRP12	CORD GRIP - 1/2IN MPT - BLACK NYLON - CORD RANGE 0.17IN TO 0.45IN - WATER RESISTANT - FOR 7/8IN HOLE - NO NUT INCLUDED
CGRP12-NUT	NUT - 1/2NPT - BLACK NYLON
FCV14-120VAC	FLUID CONTROL VALVE - DEMA - 1/4IN FPT - 7 GPM - POLYPROPYLENE BODY - VITON DIAPHRAGM - 120VAC SOLENOID - NORMALLY CLOSED - 18IN 18AWG FLYING LEADS
H38BL-F	3/8IN ID BLUE HOSE-HYBRID TPE-AVAILABLE PER FT
HB1438	1/4in MPT X 3/8in HOSE BARB (PLASTIC)
HB1238	HOSE BARB - POLYPROPYLENE - 1/2IN FPT X 3/8IN BARB
NV14	NEEDLE VALVE-1/4IN NPT-INCLUDES BLACK KNOB
P18	PLUG - 1/8IN MPT - 304 STAINLESS STEEL - SQUARE HEAD
PBA-12117	POLY BOX ASSEMBLY - 12IN X 11IN X 7IN - GRAY POLYPROPYLENE - INCLUDES BRAND LABEL AND MOUNTING HARDWARE
PB12117-BOX	POLY BOX - GRAY POLYPROPYLENE - FOR PBA-12117
PB12117-LID	POLY BOX LID - GRAY POLYPROPYLENE - FOR PBA-12117 - INCLUDES PB-GSKT ROPE SEAL
PB-FT	POLY BOX FOOT - GRAY POLYPROPYLENE - FOR PBA-12117 AND PBA-16138
PB-LTCH	POLY BOX LATCH - GRAY POLYPROPYLENE - TWO PIECES ASSEMBLED - FOR PBA-12117 AND PBA-16138
PB-PIN	STAINLESS STEEL HINGE PIN FOR PB16138 AND PB12117
QF1212	QUICK FIT-1/2 MPT X 1/2 OD TUBE-POLYPROPYLENE
QFSOV12-POM	SHUT OFF VALVE 1/2in TUBE-ACETAL(POM)

ITEM NUMBER	DESCRIPTION
QFT12	UNION TEE 1/2in TUBE - POLYPROPYLENE
R16	REGULATOR - AIR - 2X 1/4IN FPT AND 2X 1/8IN FPT PORTS - NO BOWL AND FILTER - NO GAUGE
S1034-FH-HL	SCREW - #10 X 3/4IN - STAINLESS STEEL - FLAT HEAD PHILLIPS - HILO THREAD
SN1414	STAINLESS HEX NIPPLE 1/4 MPT X 1/4 MPT
SSA1412	STAINLESS ADAPTOR 1/2 FPT X 1/4 MPT
SSA14BKH	BULKHEAD ADAPTER - STAINLESS STEEL - 1/4 IN. NPT X 1/4 IN. NPSM
SSC38	SCREW BAND CLAMP - STAINLESS STEEL - FOR 3/8IN HOSE
SSSFN12	SERRATED STAINLESS STEEL FLANGE NUT - 1/2 IN.
TMR-RPT-120VAC	TIMER - REPEAT CYCLE - SECONDS AND MINUTES ADJUSTABLE DIGI-SET - 120VAC - SCREW TERMINAL BLOCK - INCLUDES INSTRUCTIONS
TSW-BDY	TOGGLE SWITCH - BODY - SINGLE POLE SINGLE THROW - NICKEL-PLATED BRASS - 1/4IN SPADE TERMINALS - 1/2IN MOUNTING HOLE - 15/32-32 KEYED THREADED BUSHING
TSW-PLT	TOGGLE SWITCH - ON/OFF PLATE - NICKEL-PLATED STEEL - MOUNTING HOLE FOR 15/32 KEYED BUSHING
TSW-BT	TOGGLE SWITCH - MOUNTING BOOT - BLACK SILICONE RUBBER - 15/32-32 INTEGRATED NUT
WC1416-FSPD14	WIRE CONNECTOR - FOR 14 TO 16 GAUGE WIRE - 1/4IN FEMALE SPADE - BLUE PVC INSULATED
WMS14	WALL MOUNT SCREW - #14 X 1 1/4IN - STAINLESS STEEL - HEX HEAD SLOTTED
WMS14A	WALL MOUNT SCREW ANCHOR -#14 X 1 1/4IN - PLASTIC - 5/16IN DRILL SIZE
WR183-8-WPLG	WIRE CORD WITH US STANDARD UNPOLARIZED GROUNDED PLUG - 18AWG 3 CONDUCTOR - 8FT LONG - BLACK RUBBER JACKET - EPDM INSULATION - TYPE SJ00W - 10A RATING